


Technical Guide


Creating Global Links

PLEASE NOTE – GLOBAL LINKS REQUIRES THE PC TO BE ONLINE FOR ITS LINKS TO BE EXECUTED.

Select **Database**, then **Global Links** (If you are using Integra32 Ver. 4.1.16 or older, you'll need to select **Links**)

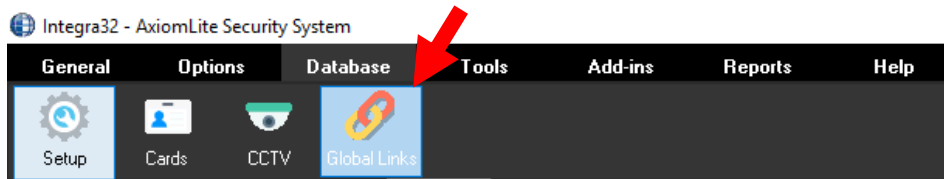

You'll now be presented with the *Global Links* window.

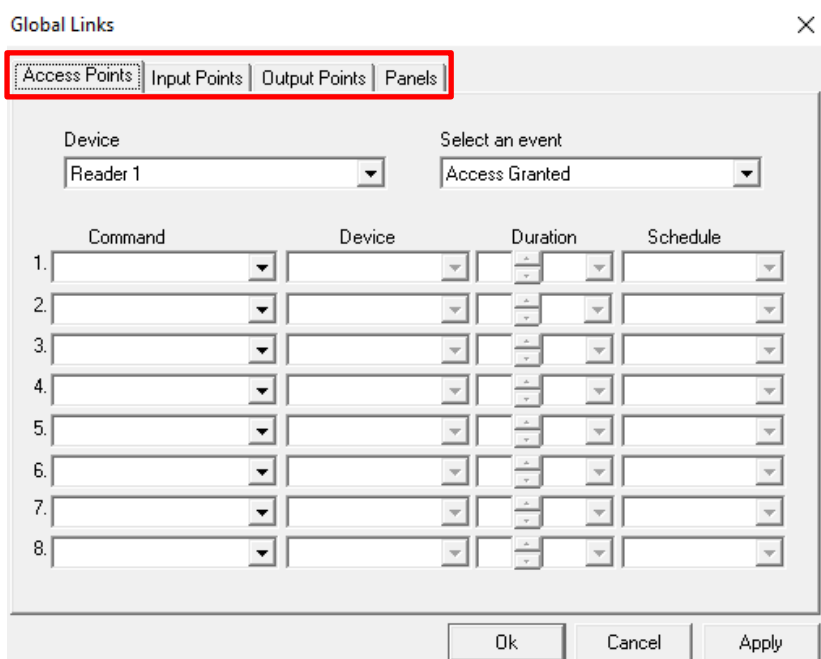

From this screen you will be able to set up links for *Access points*, *Input & output points* and your *panels*.

Select your required **tab**. For example, we will be using the *Input Points* tab.

Global Links

Access Points | **Input Points** | Output Points | Panels

Device: Reader 1 | Select an event: Access Granted

	Command	Device	Duration	Schedule
1.				
2.				
3.				
4.				
5.				
6.				
7.				
8.				

Ok Cancel Apply

Select your **Input**

Global Links


Access Points | **Input Points** | Output Points | Panels

Device: Input 3 | Select an event: Input Abnormal


	Command	Device	Duration	Schedule
1.				
2.				
3.				
4.				
5.				
6.				
7.				
8.				

Ok Cancel Apply

Select an **Event**. For Example, we will be using the *Input Alarm* event.

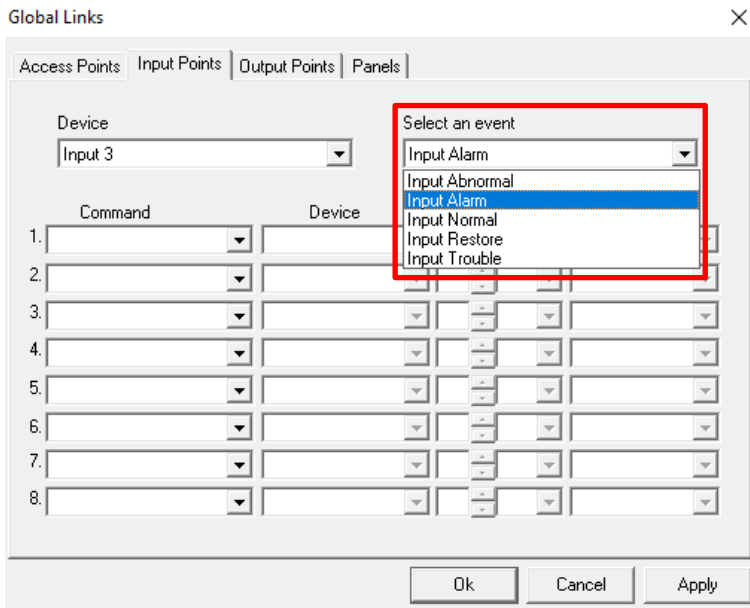


Now that we have selected our event, we will need to pick our **Command**.

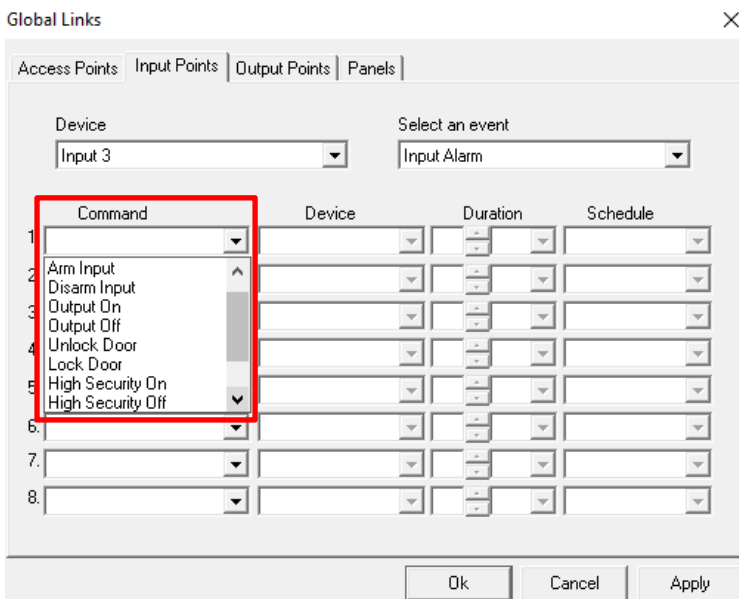


For this link, we will be selecting the *Unlock Door* option.

We must now select which *Device/s* the command will be sent to. This can either be all readers, or a specific reader.

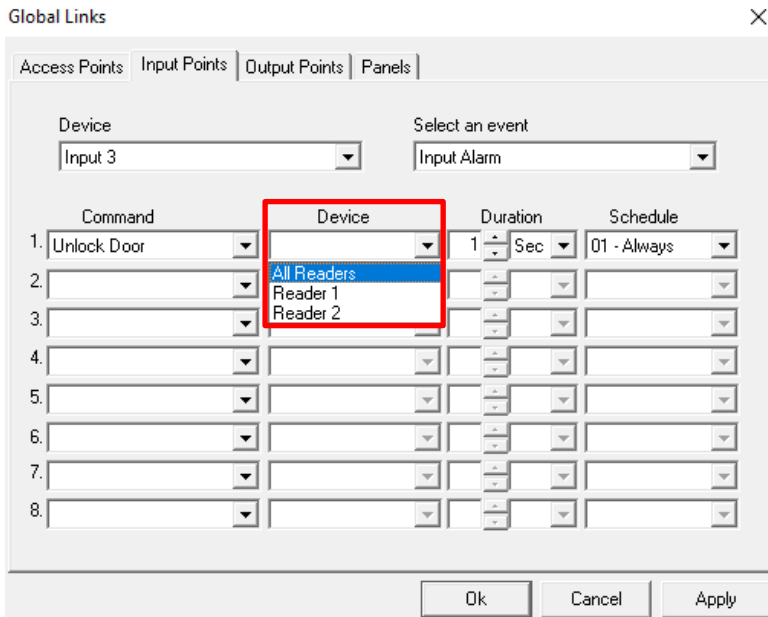


We are now going to set the *Duration* of the command.

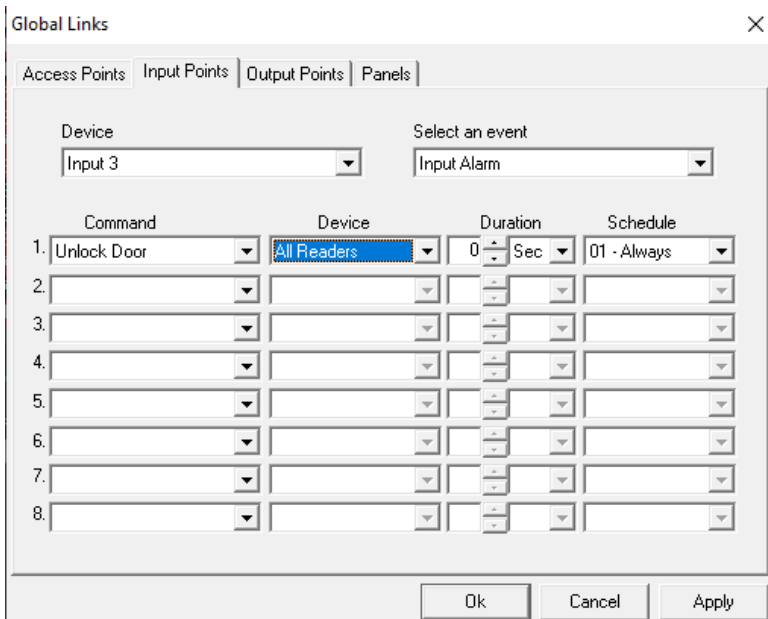

Setting the *Duration* to **0 Seconds** will allow this command to become permanent.

Finally, you will need to link this command to a **Schedule**.

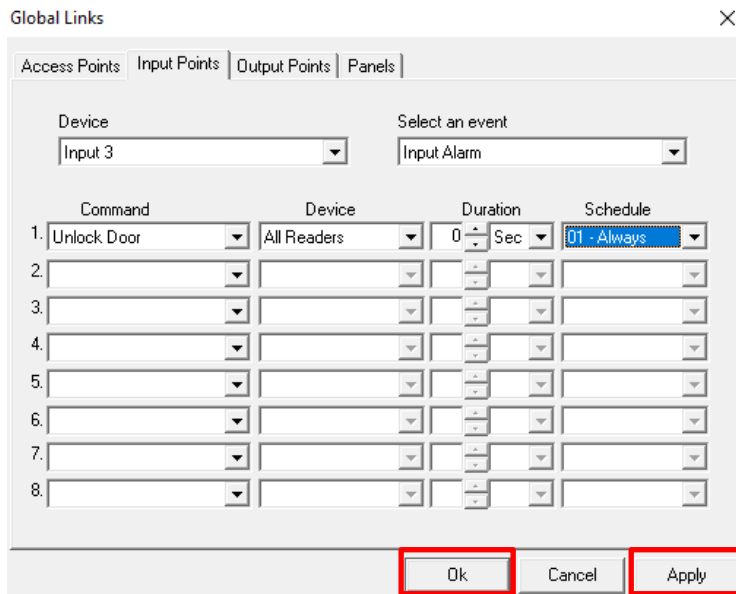

Once you have selected your Schedule, you can **Apply** the changes and then select **OK**.

Now that the **Global Link** has been applied, the link will become active whenever the fire alarm is triggered.

We will now have to put an *Input Restore* in place. This is to revert any doors back to their original state before an alarm was triggered.

Please follow the above steps once again. However, please be sure to select the following:

Event: Input Restore

Command: Lock Door

Duration: 1 Sec*

**Selecting a 1 second duration will allow all doors to have a buffer period, so that they restore to their original state before Global Link was activated.

Once you have been through all the above, you **Global Link** will be activated.