

Quick Start Guide - UNC100

Before beginning the software installation

- Please contact support.uk@rbh-access.com for a software download link
- refer to page 2 for supported server machines. Home editions are not supported.
- Axiom Lite is to be installed on a physical machine. VM's are not supported.
- Firewall and Anti-Virus Software has been temporarily disabled.
- User Account Control has been set to Never Notify.
- **Battery Isolator Paper has been removed from the back of the UNC100.**
- UNC100 is connected to the PC by RJ45/Ethernet cable, and the UNC100 is powered.



Then:

- Disable all Network Connections on the PC except **LAN/Local Area Connection**.
Set the PC's LAN to **Static IP** and enter **192.168.168.20**
- Run the Axiom Lite software, and follow the Axiom Lite software install Wizard.

Before You Begin

This document describes the process required to install Integra32™ V5.1.5XR5.0 software on your computer.

Before you run the installation please read the [*Pre-Installation Considerations*](#) for additional information that may affect your installation.

1. Pre-Installation Considerations

1.1. Computer Requirements

Before you install Integra32™ V5.1.XR5.0 make sure that your computer's configuration meets the following requirements:

Server

Requirement	Description
<i>Operating system¹</i>	Windows 8.1, Windows 10, Windows Server 2012/2012R2, Windows Server 2016 and Windows Server 2019
<i>Microprocessor (CPU)</i>	Intel Core i5 and equivalent
<i>Memory</i>	4GB (minimum), 8GB (recommended)
<i>Hard disk space</i>	2Gb (Installation), 20Gb free space (to run) 100GB if running RBHView as well

Client

Requirement	Description
<i>Operating system¹</i>	Windows 8.1, Windows 10, Windows Server 2012/2012R2, Windows Server 2016 and Windows Server 2019
<i>Microprocessor (CPU)</i>	Intel Core i5 and equivalent
<i>Memory</i>	2GB (minimum), 4GB (recommended)
<i>Hard disk space</i>	1GB(Installation)