



Technical Guide

Adding Hardware to Axiom X


- At the top of the Axiom X software, select **Database** and then Hardware

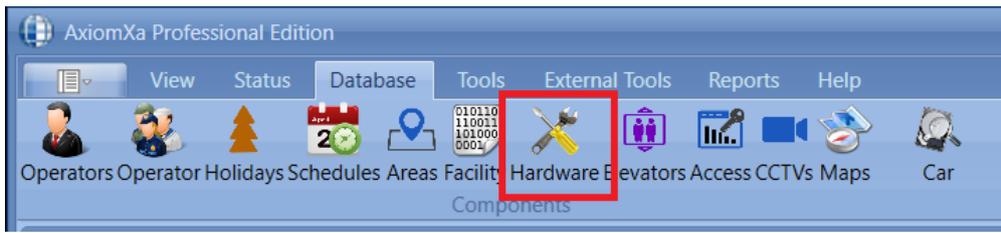

- Right click on Networks and select Add Networks

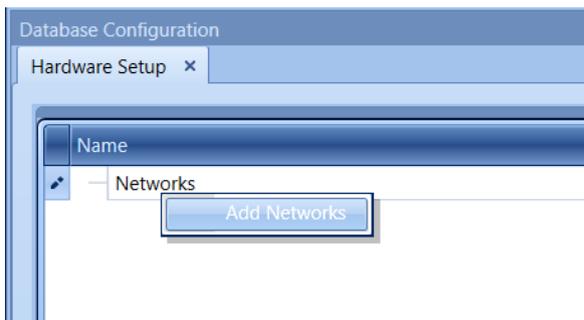


- Enter your network name

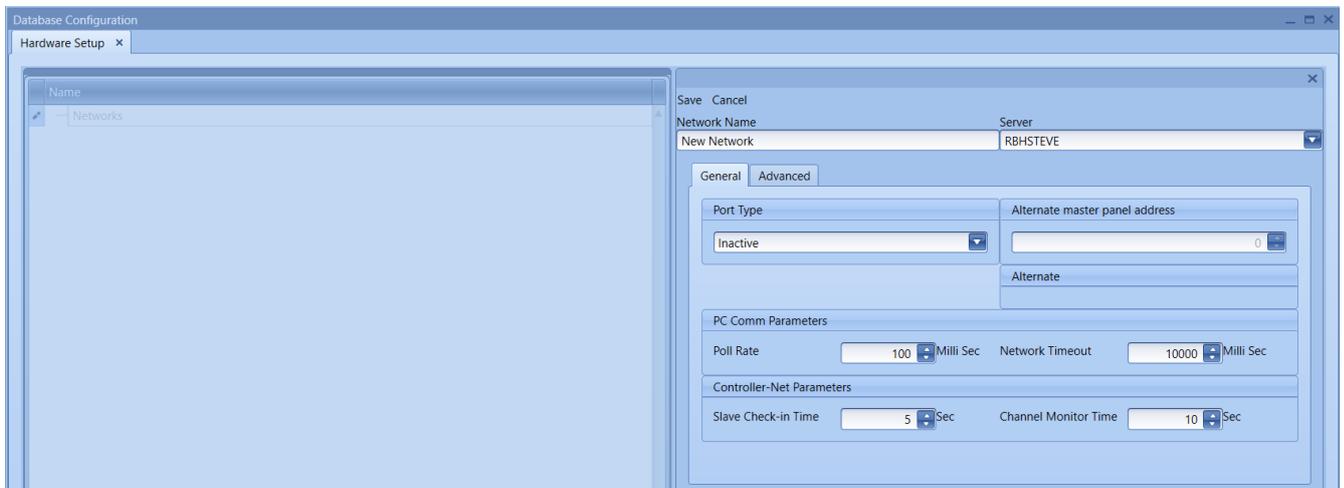


TGAX1 – Creating an Access Level


- Change port type to TCP/IP and enter IP address (default 192.168.168.125) and port 3002

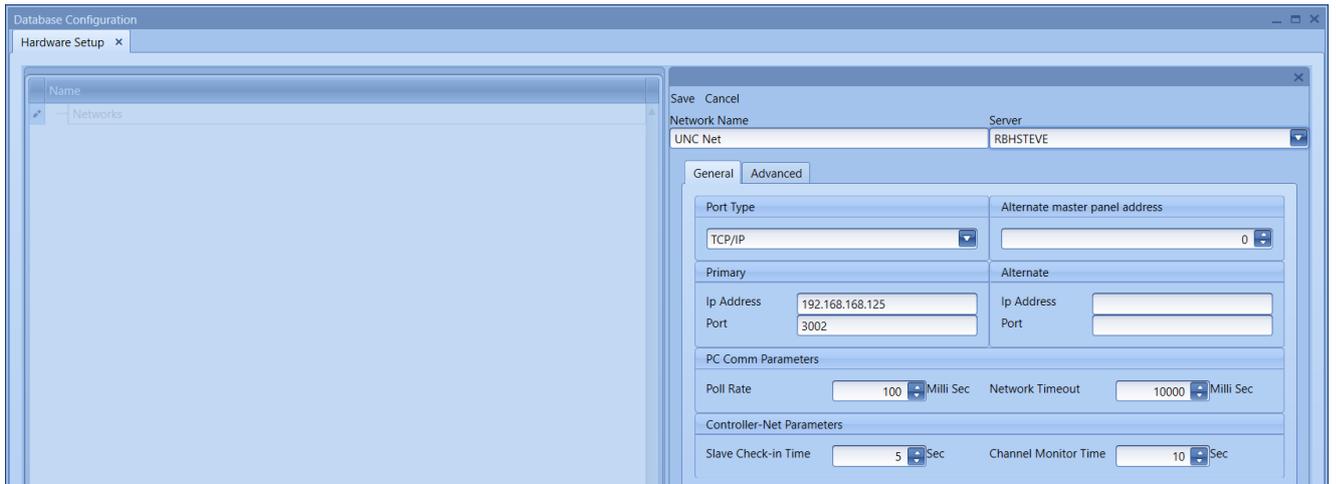

- Click save
- Expand Network and right click on controllers

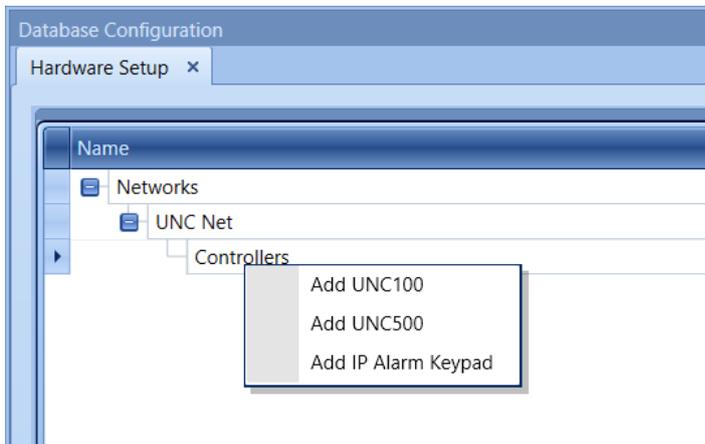


- Select the controller type you are using (we have added a UNC500 for this guide)

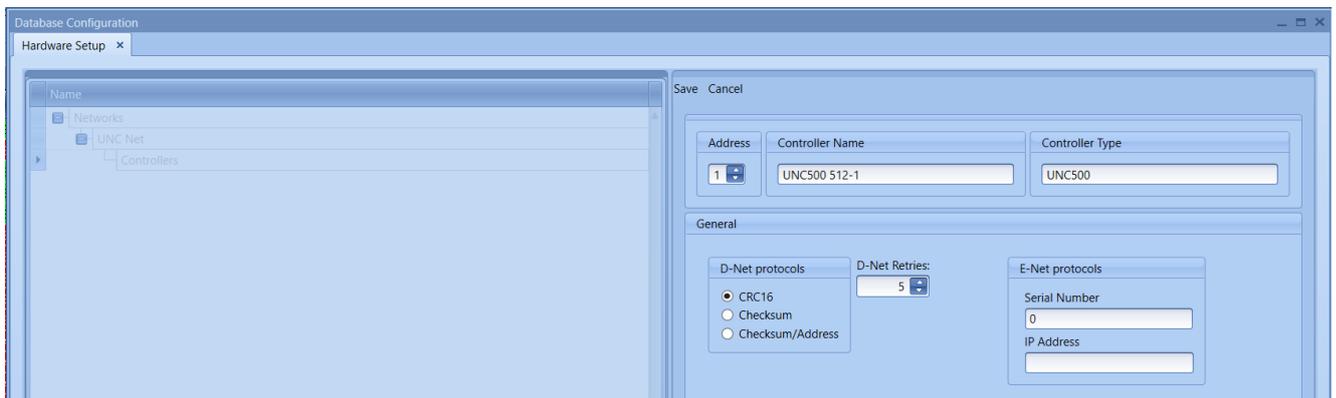

- Enter your controller description and click save.

TGAX1 – Creating an Access Level

- Once the UNC is added you will see 2 access point and all of your inputs and outputs
UNC500 – 2 Access Points 8 Inputs and 8 Outputs
UNC100 – 2 Access Points 4 Inputs and 4 Outputs

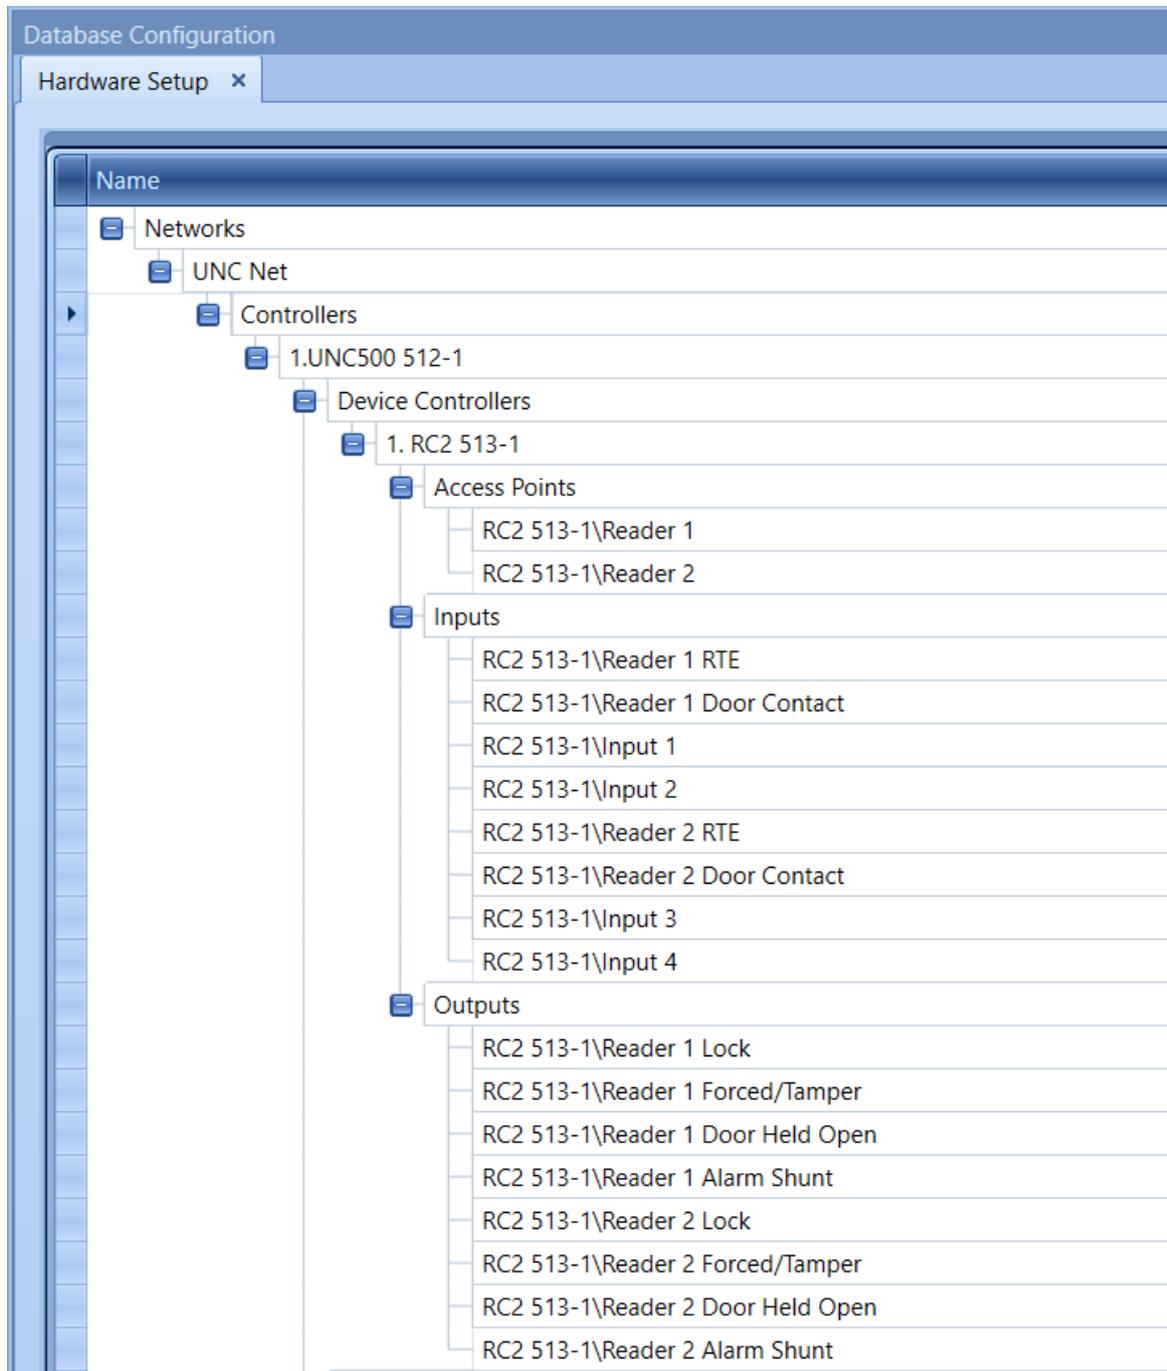

Adding additional controllers types will depend on your network configuration, please refer to the Axiom X training documentation for clarification.